



## Patchwork Aplenty - DIY Batting Stand

patchworkaplenty@gmail.com


www.patchworkaplenty.com

**These measurements fit a 90"x40yrd roll of Warm & Natural Batting. If you are building to suit a different roll of batting, your measurements may need to be adjusted.**



1. Create base: Lay your four cuts of 2x4 boards in a rectangle. Lay your 4' boards on their sides, and the 21" boards on their backs. Screw together at each outside corner.

### Pieces:

- 2- end pieces cut from 3/4" plywood (see diagram for dimensions)
- 2- four ft. 2x4s
- 2- 21 inch 2x4s
- 1- wooden dowel, 1.25" diameter (drill a hole through each end)
- 2- eye bolts with nuts
- 4- 2 inch castors
- wood screws

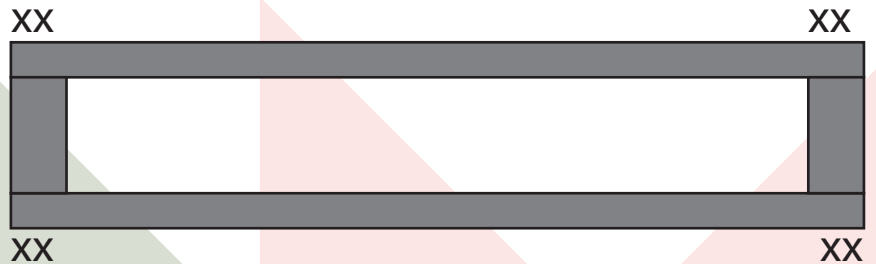

2. Place one end piece to end of base and screw together at each corner and one screw in the middle for support. Repeat on other end.

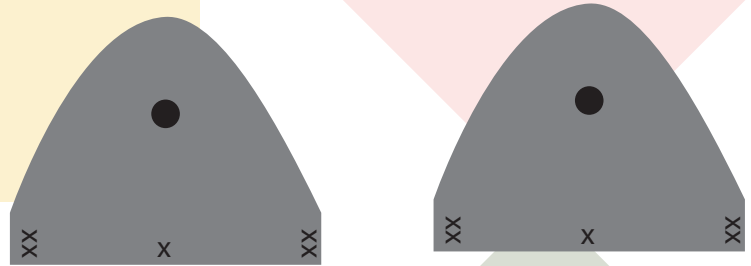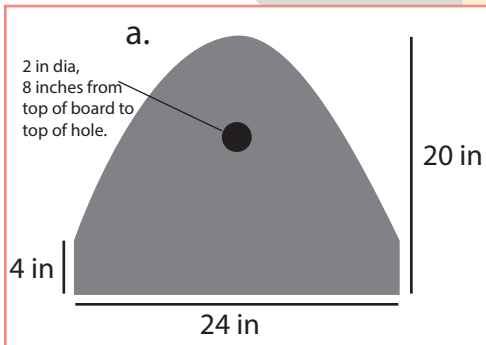

3. Attach castors to bottom of frame at each corner.

4. Run dowel through batting roll. Place one end through hole on the frame, then slide the dowel through the other end. Secure dowel in place with eyebolts and nuts.

**Note: Final height of batting stand will depend on your castor size. This stand fits under my APQS Lenni table at it's lowest height with 2" castors. You may also use locking castors if you desire.**

